

Pulse Quick Start

Default Codes:

- Factory (Out of the Box)
 - 1 ... Installation testing
 - 5-5-5-5-5 ... Set Up Code
- After Configuration Set Up
 - 1-2-3-4-5-6 ... Manager Code

Set-Up Chart

<u>Configuration</u>	<u>Max Codes</u>	<u>Custody</u>
0	2	Single
1	9	Single
2	2	Dual
3	9	Dual

Programming

- **Configuration Setup**
 - Press and **Hold 2** (3-Seconds) ... LED Stays On
 - Enter 5-5-5-5-5
 - Press and Release Configuration Option ... LED Goes Off

Single Custody

- **Add Users (Function 1)**
 1. Press and **Hold 1** ... LED Stays On
 2. Enter Manager Code
 3. Press & Release User Position (1 – 9)
 4. Enter Code
 5. Re-Enter Code
 3. Enter New 6-Digit Code
 4. Re-Enter New 6-Digit Code
- **Disable / Enable Users (Function 2)**
 1. Press and **Hold 2** ... LED Stays On
 2. Enter Manager Code
 3. NOTE: All User Disabled / Enabled
- **Change Codes (Function 0)**
 1. Press and **Hold 0** ... LED Stays On
 2. Enter Current 6-Digit Code
- **Delete Users (Function 3)**
 4. Press and **Hold 3** ... LED Stays On

Pulse Quick Start

5. Enter Manager Code
 6. Press and Release User Position (1 – 9)
- **Time Delay (Function 9)**
 7. Press and **Hold 9** ... LED Stays On
 8. Enter Manager Code
 9. Enter Time Delay AND Open Window
 - (Ex: TD = 10 and OW =05)
 10. Re-Enter Time Delay AND Open Window
 11. NOTE: (**Must be 2-Digit Entry**)
 - Time Delay 1 – 99 Minutes
 - Open Window 1 – 19
 - **Membrane Test (Function 5)**
 12. Press and **Hold 5** ... LED Stays On
 13. Press and Release Each Digit
 - Short Beep = Key is Good
 - Long Beep = Key is Defective
- NOTE: Dallas keys During the installation (function #1), a Dallas key (model 1982) can be associated to a user by simply placing it in the Dallas reader after entering the ID and related code. The user is then identified by numeric code + Dallas key.**
2. Enter Manager Code
 3. Press & Release User Position (1 – 9)
 4. Enter Code
 5. Re-Enter Code
- **Add Additional User Codes**
 1. Enter User Code
 2. Enter Manager Code **HOLDING** Last Digit ... LED Stays On
 3. Press & Release 1
 4. Press & Release User Position (1 – 9)
 5. Enter Code
 6. Re-Enter Code
 - **Change Codes (Function 0)**
 1. Press and **Hold 0** ... LED Stays On
 2. Enter Current 6-Digit Code
 3. Enter New 6-Digit Code
 4. Re-Enter New 6-Digit Code
 - **Delete Users (Function 3)**
 1. Enter User Code
 2. Enter Manager Code **HOLDING** Last Digit ... LED Stays On
 3. Press & Release 3
 4. Press & Release User Position (1 – 9)

Dual Custody

- **Add Users (Function 1)**
 - **Add 1st User Code**
 1. Press and **Hold 1** ... LED Stays On

Pulse Quick Start

- **Time Delay (Function 9)**
 14. Press and **Hold 9** ... LED Stays On
 15. Enter Manager Code
 16. Enter Time Delay AND Open Window
 - (Ex: TD = 10 and OW =05)
 17. Re-Enter Time Delay AND Open Window
 18. NOTE: (**Must be 2-Digit Entry**)
 - Time Delay 1 – 99 Minutes
 - Open Window 1 – 19

- **Membrane Test (Function 5)**
 19. Press and **Hold 5** ... LED Stays On
 20. Press and Release Each Digit
 - Short Beep = Key is Good
 - Long Beep = Key is Defective

NOTE: Dallas keys During the installation (function #1), a Dallas key (model 1982) can be associated to a user by simply placing it in the Dallas reader after entering the ID and related code. The user is then identified by numeric code + Dallas key.